



Sound Skulptor CP5 176 User manual

Installation

The lunchbox (or rack) hosting the preamp must be installed in a well ventilated area. Class A circuits are known to produce heat. Do not omit the 2 fixing screws on the module front plate before moving. It is pretty heavy and the weight would put too much pressure on the back connector.

Connections

The preamp connects to the rear female XLR for the audio source and to the rear male XLR for output.

Pin 1 = Ground, Pin 2 = Hot, Pin 3 = Cold.



1. Input level

Potentiometer that sets the signal level before compression. It defines the compression threshold.

2. Output level

Potentiometer that set the signal level after compression (make up gain).

3. Ratio

Rotary switch that sets the compression ratio from 2 to 20. Ratio 2, allowing more subtle compressions, has been added to the original circuit. The SLAM mode is the "all buttons pressed" on the 1176.

4. Attack time

Potentiometer that sets the attack time: The delay before the compressor starts reducing gain. Clockwise rotation increases the attack time. The pot has a logarithmic law allowing accurate settings in the fast attacks.

5. Release time

Potentiometer that sets the release time: The time the compressor takes to return to the "no gain reduction" state. Clockwise rotation increases the release time. The pot has a logarithmic law allowing accurate settings in the fast releases.

6. Gain Reduction meter

High resolution gain reduction display: 16 LED's from -1 dB to -22dB

7. High pass filter

Inserts a 80 Hz high-pass filter in the sidechain. Produces a Fat sound and eliminates bass driven pumping.

8. Distortion

Modifies the signal balance on the FET, adding second harmonic distortion. Close to the Rev A version of 1176.

9. Stereo Link

Connects two compressors in stereo mode. The link is made via the pin 6 of the host connectors. These pins must be tied together on the host. This link is provided in some hosts, on others you must wire it by yourself. The switches must be depressed on both compressors to activate the link.

10. LED

Shows the bypass status.

11. Off

Compressor bypass button (hardware by relay).